



TORCUP

2018 - May

RP-1000 E6 Torque Conversion Chart

Imperial Conversion	
PSI	Ft-lbs
10	150
12	180
14	211
16	241
18	272
20	302
22	332
24	363
26	393
28	424
30	454
32	484
34	515
36	545
38	576
40	606
42	635
44	665
46	694
48	724
50	753
52	781
54	809
56	838
58	866
60	894
62	922
64	949
66	977
68	1004
70	1032

Metric Conversion	
Bar	Nm
0.69	203
0.83	244
0.97	286
1.10	327
1.24	369
1.38	409
1.52	450
1.65	492
1.79	533
1.93	575
2.07	616
2.21	656
2.34	698
2.48	739
2.62	781
2.76	822
2.90	861
3.03	902
3.17	941
3.31	982
3.45	1021
3.59	1059
3.72	1097
3.86	1136
4.00	1174
4.14	1212
4.27	1250
4.41	1287
4.55	1325
4.69	1361
4.83	1399

For reference purposes only, please consult the calibration chart specific to your purchase or rental tool.

TorcUP Inc.
 1025 Conroy Place
 Easton, PA 18040
 Tel:+1 610-250-5800 Fax:+1 610-250-2700
www.torcup.com

