



TORCUP

2018 - May

RP-1000 Torque Conversion Chart

Imperial Conversion	
PSI	Ft-lbs
10	148
12	178
14	209
16	239
18	270
20	300
22	336
24	372
26	407
28	443
30	479
32	510
34	542
36	573
38	605
40	636
42	667
44	698
46	728
48	759
50	790
52	821
54	852
56	882
58	913
60	944
62	961
64	978
66	996
68	1013
70	1030

Metric Conversion	
Bar	Nm
0.69	201
0.83	241
0.97	283
1.10	324
1.24	366
1.38	407
1.52	456
1.65	504
1.79	552
1.93	601
2.07	649
2.21	691
2.34	735
2.48	777
2.62	820
2.76	862
2.90	904
3.03	946
3.17	987
3.31	1029
3.45	1071
3.59	1113
3.72	1155
3.86	1196
4.00	1238
4.14	1280
4.27	1303
4.41	1326
4.55	1350
4.69	1373
4.83	1396

For reference purposes only, please consult the calibration chart specific to your purchase or rental tool.

TorcUP Inc.
 1025 Conroy Place
 Easton, PA 18040
 Tel:+1 610-250-5800 Fax:+1 610-250-2700
www.torcup.com

