



## RP-2000 Torque Conversion Chart

Imperial Conversion	
PSI	Ft-lbs
10	231
12	277
14	323
16	368
18	414
20	460
22	515
24	570
26	625
28	680
30	735
32	786
34	838
36	889
38	941
40	992
42	1040
44	1088
46	1136
48	1184
50	1232
52	1275
54	1319
56	1362
58	1406
60	1449
62	1495
64	1541
66	1586
68	1632
70	1678
72	1717
74	1756
76	1796
78	1835
80	1874
82	1902
84	1930
86	1959
88	1987
90	2015

Metric Conversion	
Bar	Nm
0.69	313
0.83	376
0.97	438
1.10	499
1.24	561
1.38	624
1.52	698
1.65	773
1.79	847
1.93	922
2.07	997
2.21	1066
2.34	1136
2.48	1205
2.62	1276
2.76	1345
2.90	1410
3.03	1475
3.17	1540
3.31	1605
3.45	1670
3.59	1729
3.72	1788
3.86	1847
4.00	1906
4.14	1965
4.27	2027
4.41	2089
4.55	2150
4.69	2213
4.83	2275
4.96	2328
5.10	2381
5.24	2435
5.38	2488
5.52	2541
5.65	2579
5.79	2617
5.93	2656
6.07	2694
6.21	2732

For reference purposes only, please consult the calibration chart specific to your purchase or rental tool.

TorcUP Inc.  
 1025 Conroy Place  
 Easton, PA 18040  
 Tel:+1 610-250-5800 Fax:+1 610-250-2700  
[www.torcup.com](http://www.torcup.com)

