



# TORCUP

2018 - May

## RP-3000 Torque Conversion Chart

Imperial Conversion	
PSI	Ft-lbs
10	484
12	588
14	692
16	797
18	901
20	1005
22	1111
24	1218
26	1324
28	1431
30	1537
32	1632
34	1728
36	1823
38	1919
40	2014
42	2113
44	2212
46	2312
48	2411
50	2510
52	2603
54	2695
56	2788
58	2880
60	2973
62	3012
64	3041
65	3070

Metric Conversion	
Bar	Nm
0.69	656
0.83	797
0.97	938
1.10	1081
1.24	1222
1.38	1363
1.52	1506
1.65	1651
1.79	1795
1.93	1940
2.07	2084
2.21	2213
2.34	2343
2.48	2472
2.62	2602
2.76	2731
2.90	2865
3.03	2999
3.17	3135
3.31	3269
3.45	3403
3.59	3529
3.72	3654
3.86	3780
4.00	3905
4.14	4031
4.27	4084
4.41	4123
4.48	4162

For reference purposes only, please consult the calibration chart specific to your purchase or rental tool.

TorcUP Inc.  
 1025 Conroy Place  
 Easton, PA 18040  
 Tel:+1 610-250-5800 Fax:+1 610-250-2700  
[www.torcup.com](http://www.torcup.com)

