



TORCUP

2018 - May

RP-500 Torque Conversion Chart

Imperial Conversion	
PSI	Ft-lbs
10	78
12	88
14	99
16	109
18	120
20	130
22	146
24	161
26	177
28	192
30	208
32	220
34	232
36	243
38	255
40	267
42	279
44	291
46	302
48	314
50	326
52	339
54	352
56	366
58	379
60	392
62	404
64	417
66	429
68	442
70	454
72	469
74	484
76	500
78	515
80	530

Metric Conversion	
Bar	Nm
0.69	106
0.83	119
0.97	134
1.10	148
1.24	163
1.38	176
1.52	198
1.65	218
1.79	240
1.93	260
2.07	282
2.21	298
2.34	315
2.48	329
2.62	346
2.76	362
2.90	378
3.03	395
3.17	409
3.31	426
3.45	442
3.59	460
3.72	477
3.86	496
4.00	514
4.14	531
4.27	548
4.41	565
4.55	582
4.69	599
4.83	616
4.96	636
5.10	656
5.24	678
5.38	698
5.52	719

For reference purposes only, please consult the calibration chart specific to your purchase or rental tool.

TorcUP Inc.
1025 Conroy Place
Easton, PA 18040
Tel:+1 610-250-5800 Fax:+1 610-250-2700
www.torcup.com

