



# TORCUP

2018 - May

## RP-6000 Torque Conversion Chart

Imperial Conversion	
PSI	Ft-lbs
10	714
12	876
14	1038
16	1201
18	1363
20	1525
22	1661
24	1797
26	1933
28	2069
30	2205
32	2351
34	2496
36	2642
38	2787
40	2933
42	3055
44	3176
46	3298
48	3419
50	3541
52	3679
54	3817
56	3954
58	4092
60	4230
62	4361
64	4491
66	4622
68	4752
70	4883
72	5014
74	5144
76	5275
78	5405
80	5536
82	5627
84	5718
86	5808
88	5899
90	5990

Metric Conversion	
Bar	Nm
0.69	968
0.83	1188
0.97	1407
1.10	1628
1.24	1848
1.38	2068
1.52	2252
1.65	2436
1.79	2621
1.93	2805
2.07	2990
2.21	3188
2.34	3384
2.48	3582
2.62	3779
2.76	3977
2.90	4142
3.03	4306
3.17	4471
3.31	4636
3.45	4801
3.59	4988
3.72	5175
3.86	5361
4.00	5548
4.14	5735
4.27	5913
4.41	6089
4.55	6267
4.69	6443
4.83	6620
4.96	6798
5.10	6974
5.24	7152
5.38	7328
5.52	7506
5.65	7629
5.79	7753
5.93	7875
6.07	7998
6.21	8121

For reference purposes only, please consult the calibration chart specific to your purchase or rental tool.

TorcUP Inc.  
 1025 Conroy Place  
 Easton, PA 18040  
 Tel:+1 610-250-5800 Fax:+1 610-250-2700  
[www.torcup.com](http://www.torcup.com)

