



# TORCUP

## TU-5 Torque Conversion Chart

Imperial Conversion	
PSI	Ft-lbs
1,000	587
1,200	705
1,400	823
1,600	940
1,800	1058
2,000	1176
2,200	1294
2,400	1413
2,600	1531
2,800	1650
3,000	1768
3,200	1885
3,400	2002
3,600	2120
3,800	2237
4,000	2354
4,200	2474
4,400	2595
4,600	2715
4,800	2836
5,000	2956
5,200	3076
5,400	3196
5,600	3315
5,800	3435
6,000	3555
6,200	3673
6,400	3791
6,600	3909
6,800	4027
7,000	4145
7,200	4265
7,400	4386
7,600	4506
7,800	4627
8,000	4747
8,200	4864
8,400	4982
8,600	5099
8,800	5217
9,000	5334
9,200	5452
9,400	5569
9,600	5687
9,800	5804
10,000	5922

Metric Conversion	
Bar	Nm
69	796
83	956
97	1116
110	1274
124	1434
138	1594
152	1754
165	1916
179	2076
193	2237
207	2397
221	2556
234	2714
248	2874
262	3033
276	3192
290	3354
303	3518
317	3681
331	3845
345	4008
359	4170
372	4333
386	4495
400	4657
414	4820
427	4980
441	5140
455	5300
469	5460
483	5620
496	5783
510	5947
524	6109
538	6273
552	6436
565	6595
579	6755
593	6913
607	7073
621	7232
634	7392
648	7551
662	7711
676	7869
689	8029

For reference purposes only, please consult the calibration chart specific to your purchase or rental tool.

TorcUP, Inc.  
1025 Conroy Place  
Easton, Pa 18040

Tel:610-250-5800 Fax: 610-250-2700

