



TORCUP

TX-2 Torque Conversion Chart (Imperial)

	Imperial Conversion	
	PSI	Ft-lbs
Hex Range 3/4" - 1 13/16"	1,000	202
	1,200	240
	1,400	278
	1,600	317
	1,800	355
	2,000	393
	2,200	432
	2,400	471
	2,600	511
	2,800	550
	3,000	589
	3,200	629
	3,400	669
	3,600	708
	3,800	748
	4,000	788
	4,200	827
	4,400	867
	4,600	906
	4,800	946
	5,000	985
	5,200	1024
	5,400	1064
	5,600	1103
	5,800	1142
	6,000	1182
	6,200	1222
	6,400	1261
	6,600	1301
	6,800	1341
	7,000	1381
	7,200	1421
7,400	1461	
7,600	1500	
7,800	1540	
8,000	1579	
8,200	1619	
8,400	1658	
8,600	1697	
8,800	1737	
9,000	1776	
9,200	1814	
9,400	1853	
9,600	1892	
9,800	1930	
10,000	1969	

	Imperial Conversion	
	PSI	Ft-lbs
Hex Range 1 7/8" - 2 9/16"	1,000	237
	1,200	282
	1,400	326
	1,600	371
	1,800	415
	2,000	460
	2,200	506
	2,400	552
	2,600	598
	2,800	644
	3,000	690
	3,200	737
	3,400	783
	3,600	830
	3,800	876
	4,000	923
	4,200	969
	4,400	1015
	4,600	1062
	4,800	1108
	5,000	1154
	5,200	1200
	5,400	1246
	5,600	1292
	5,800	1338
	6,000	1384
	6,200	1431
	6,400	1478
	6,600	1524
	6,800	1571
	7,000	1618
	7,200	1664
7,400	1711	
7,600	1757	
7,800	1804	
8,000	1850	
8,200	1896	
8,400	1942	
8,600	1988	
8,800	2034	
9,000	2080	
9,200	2125	
9,400	2170	
9,600	2216	
9,800	2261	
10,000	2306	

For reference purposes only, please consult the calibration chart specific to your purchase or rental tool.



TORCUP

TX-2 Torque Conversion Chart (Metric)

	Metric Conversion	
	Bar	Nm
Hex Range 19-46mm	69	274
	83	326
	97	378
	110	429
	124	481
	138	532
	152	586
	165	639
	179	692
	193	745
	207	799
	221	853
	234	907
	248	961
	262	1014
	276	1068
	290	1122
	303	1175
	317	1229
	331	1282
	345	1336
	359	1389
	372	1442
	386	1496
	400	1549
	414	1602
	427	1656
	441	1710
	455	1765
	469	1819
	483	1873
	496	1927
	510	1980
524	2034	
538	2088	
552	2141	
565	2195	
579	2248	
593	2301	
607	2354	
621	2408	
634	2460	
648	2512	
662	2565	
676	2617	
689	2669	

	Metric Conversion	
	Bar	Nm
Hex Range 47-65mm	69	321
	83	382
	97	442
	110	503
	124	563
	138	624
	152	686
	165	748
	179	811
	193	873
	207	936
	221	999
	234	1062
	248	1125
	262	1188
	276	1251
	290	1314
	303	1377
	317	1439
	331	1502
	345	1565
	359	1627
	372	1689
	386	1752
	400	1814
	414	1876
	427	1940
	441	2003
	455	2067
	469	2130
	483	2194
	496	2257
	510	2320
524	2382	
538	2445	
552	2508	
565	2571	
579	2633	
593	2695	
607	2758	
621	2820	
634	2881	
648	2943	
662	3004	
676	3065	
689	3127	

For reference purposes only, please consult the calibration chart specific to your purchase or rental tool.