



TORCUP

TX-4 Torque Conversion Chart (Imperial)

	Imperial Conversion	
	PSI	Ft-lbs
Hex Range 1" - 2 9/16"	1,000	422
	1,200	502
	1,400	582
	1,600	663
	1,800	743
	2,000	823
	2,200	906
	2,400	989
	2,600	1072
	2,800	1155
	3,000	1238
	3,200	1320
	3,400	1401
	3,600	1483
	3,800	1564
	4,000	1646
	4,200	1726
	4,400	1806
	4,600	1887
	4,800	1967
	5,000	2047
	5,200	2128
	5,400	2209
	5,600	2289
	5,800	2370
	6,000	2451
	6,200	2533
	6,400	2615
	6,600	2698
	6,800	2780
	7,000	2862
	7,200	2942
	7,400	3021
	7,600	3101
	7,800	3180
	8,000	3260
	8,200	3343
	8,400	3426
	8,600	3510
	8,800	3593
	9,000	3676
	9,200	3758
	9,400	3840
	9,600	3922
	9,800	4004
	10,000	4086

	Imperial Conversion	
	PSI	Ft-lbs
Hex Range 2 5/8" - 3 1/8"	1,000	475
	1,200	565
	1,400	655
	1,600	745
	1,800	836
	2,000	926
	2,200	1019
	2,400	1112
	2,600	1206
	2,800	1299
	3,000	1393
	3,200	1484
	3,400	1576
	3,600	1668
	3,800	1760
	4,000	1852
	4,200	1942
	4,400	2032
	4,600	2122
	4,800	2212
	5,000	2303
	5,200	2393
	5,400	2484
	5,600	2575
	5,800	2666
	6,000	2757
	6,200	2849
	6,400	2942
	6,600	3034
	6,800	3127
	7,000	3219
	7,200	3309
	7,400	3398
	7,600	3488
	7,800	3577
	8,000	3667
	8,200	3761
	8,400	3854
	8,600	3948
	8,800	4041
	9,000	4135
	9,200	4227
	9,400	4319
	9,600	4412
	9,800	4504
	10,000	4596

For reference purposes only, please consult the calibration chart specific to your purchase or rental tool.



TX-4 Torque Conversion Chart (Metric)

	Metric Conversion	
	Bar	Nm
Hex Range 27-65mm	69	572
	83	681
	97	790
	110	898
	124	1007
	138	1116
	152	1228
	165	1341
	179	1453
	193	1566
	207	1679
	221	1789
	234	1900
	248	2010
	262	2121
	276	2232
	290	2340
	303	2449
	317	2558
	331	2667
	345	2775
	359	2885
	372	2994
	386	3104
	400	3214
	414	3323
	427	3435
	441	3546
	455	3657
	469	3769
	483	3880
	496	3988
	510	4096
	524	4204
	538	4312
	552	4420
	565	4533
	579	4646
	593	4758
	607	4871
	621	4984
	634	5095
	648	5206
	662	5318
	676	5429
	689	5540

	Metric Conversion	
	Bar	Nm
Hex Range 66-80mm	69	644
	83	766
	97	888
	110	1011
	124	1133
	138	1255
	152	1382
	165	1508
	179	1635
	193	1761
	207	1888
	221	2013
	234	2137
	248	2261
	262	2386
	276	2510
	290	2633
	303	2755
	317	2877
	331	3000
	345	3122
	359	3245
	372	3368
	386	3492
	400	3615
	414	3738
	427	3863
	441	3989
	455	4114
	469	4239
	483	4365
	496	4486
	510	4608
	524	4729
	538	4850
	552	4972
	565	5099
	579	5226
	593	5352
	607	5479
	621	5606
	634	5731
	648	5856
	662	5981
	676	6107
	689	6232

For reference purposes only, please consult the calibration chart specific to your purchase or rental tool.